



# VEHICLE PAD INSTALL INSTRUCTIONS


For quality assurance, please read entirety before you begin.

## Step 1: (Optional) PREPARATION

- Clear the flooring surface of any removable objects and or items. Sweep or vacuum any excess dirt and debris off of the flooring surface.


*\*WARNING: Do not walk on tiles that are not interlocked as they can be a slipping hazard. When installing your floor, be cautious of Swisstrax tiles placed on top of one another.*

## Step 2: INSTALL TILE #1

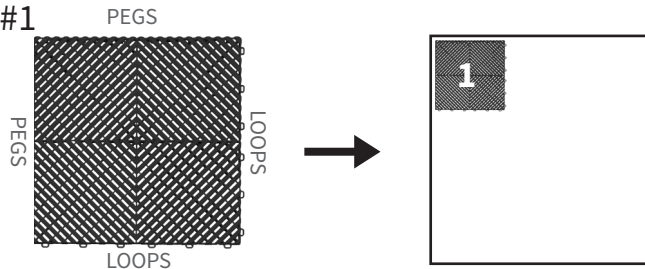

## Step 3: INSTALL THE NEXT TILES

- Work left to right, interlock Tile #2 into Tile #1 making sure that loops and pegs are facing the same direction.

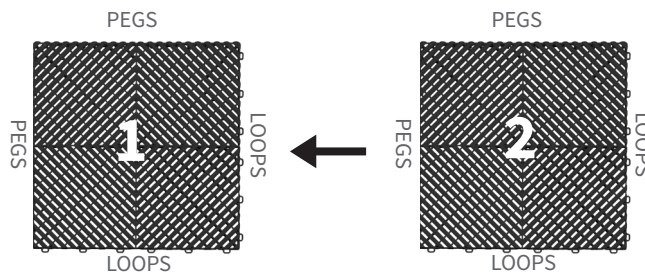


## Step 4: COMPLETE ROW #1

- Continue interlocking tiles until the desired width of first row is finished.

## Step 5: CONTINUE ON

- Begin your second row and continue interlocking tiles until the desired width is reached. Continue until final design pattern is complete.

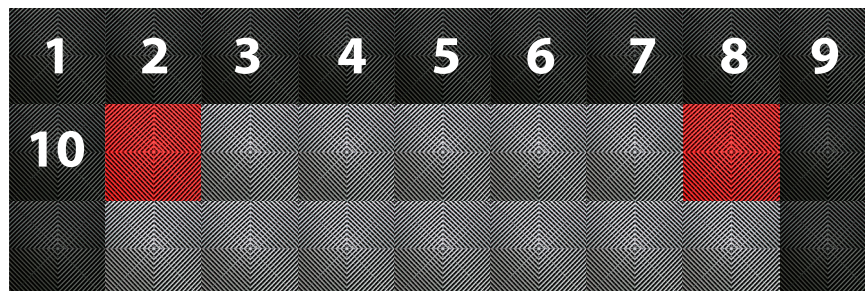




# VEHICLE PAD INSTALL INSTRUCTIONS

For quality assurance, please read entirety before you begin.

## Step 6: INSTALLING EDGES


### *LOOPED Edge Into Tile*

- Lift up tile and align the looped edge with the pegs of the tile and snap into place.

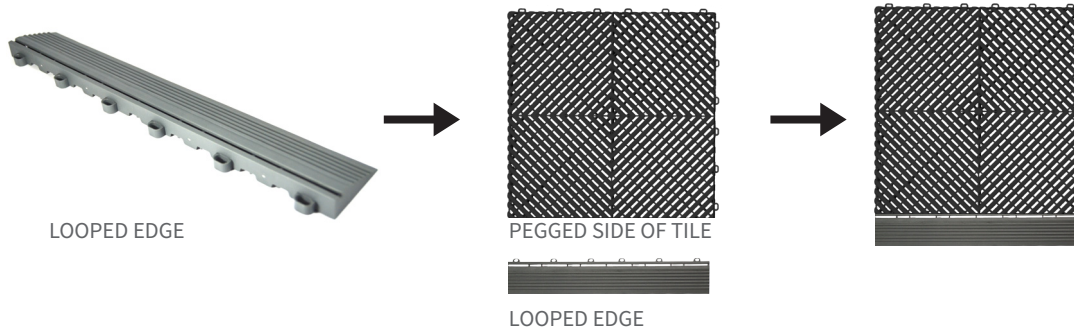

### *PEGGED Edge Into Tile*

- Align the pegged edge over the looped side of the tile and snap into place.

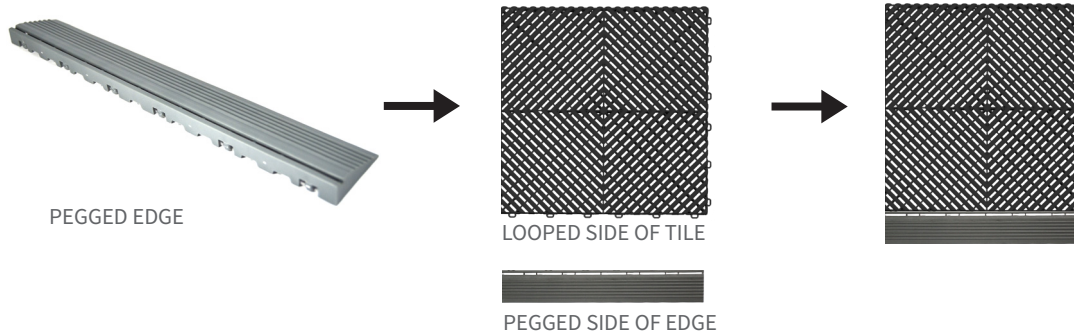

### *ATTACHING THE EDGE & CORNER*

- With pegs and loops aligned, begin by pressing the sides of the tile into the edge, working your way to the center. This may take a little pressure and you will feel a “snap” when the tile is attached to the edge.
- When attaching the corner, align the loops with the pegs of the tile and firmly press down until you hear that final “snap.”

